
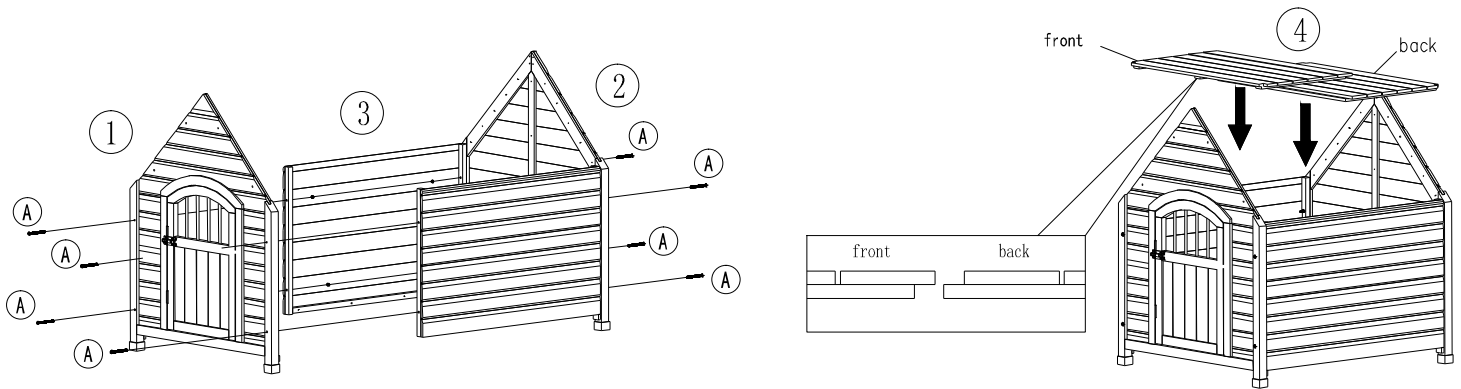
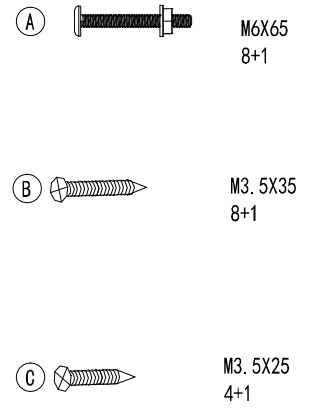



Hondenhok Private Assembly Instructions

dsp international b. v.

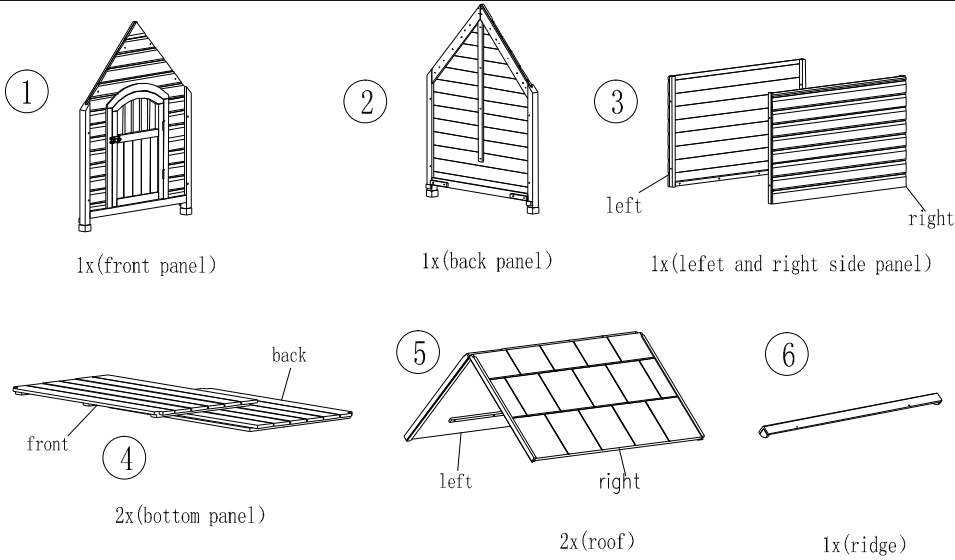


1. Connect the front Panel with the left side panel, right side panel and back panel.


2. Insert the bottom panels.

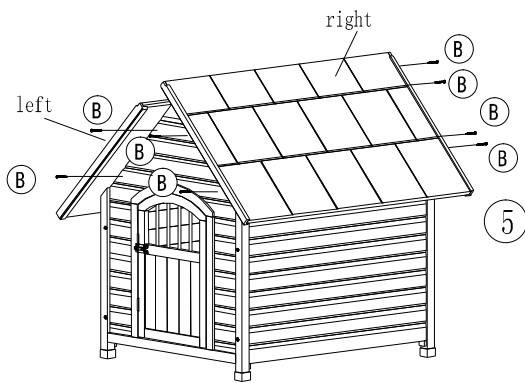

3. Fix the roofs.

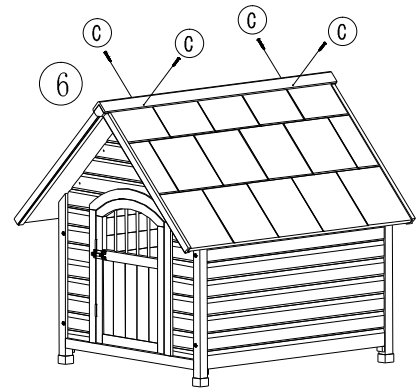

4. Fix the ridge.

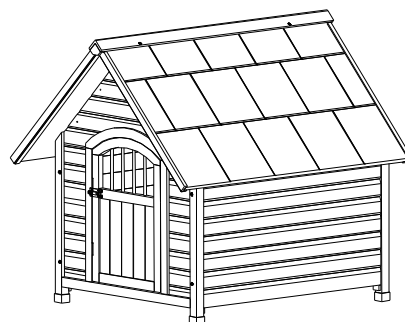

5. Finish.